



www.regulus.eu



PS N25

Installation and Operation Manual **EN**
THERMAL STORES
PS 3000 N25, PS 4000 N25 and PS 5000 N25

PS N25

CONTENTS

1 Description	3
1.1 Models	3
1.2 Tank protection	3
1.3 Thermal insulation	3
1.4 Connection points on the tank	3
1.5 Packing.....	3
2 General Information	3
3 Technical Data and Dimensions	4
4 Operation.....	5
5 Examples of ports allocation	5
6 Installation and Commissioning	7
7 Installing Insulation on the Tank	8
8 Maintenance.....	10
9 Disposal	10
10 Warranty	10

1 - Description

PS N25 Thermal Stores are intended for storing and subsequent distribution of thermal energy from solid-fuel fired boilers, heat pumps, solar collectors, electric boilers etc. No heating coils can be installed into these tanks, just an el. heating rod. Electric heating elements of 2-12 kW output, power supplied either with 230V or 3x230V/400V, can be installed into the 2,5" sleeves using a reducing piece. Tanks are fitted with nine side sleeves to connect heat sources, four for sensor sheaths and one for a safety valve. As an option, 100mm thick insulation for these tanks is sold separately.

1.1 - Models

Three models of 3022, 3991 and 4989 l capacity.

1.2 - Tank protection

The inner surface has no finish, no anticorrosion protection, the outer surface is lacquered in gray.

1.3 - Thermal insulation

Tank insulation is available as a separate item, installed on the tank on the spot for easier handling. The insulation is made of 100 mm thick fleece and fitted with a zippered outer layer in PU leather.

1.4 - Connection points on the tank

8 side sleeves in a 90° sector, G 2,5" F thread

1 top sleeve, G 2,5" F thread

4 side sleeves for sensor sheaths, G ½" F thread

1 side sleeve for a 3 bar safety valve (included), G ½" F thread

1.5 - Packing

Tanks are delivered standing, each screwed to its pallet, packed in bubble wrap.


2 - General Information

This Owners Manual is an integral and important part of the product and must be handed over to the User. Read carefully the instructions in this Manual as they contain important information concerning safety, installation, operation and maintenance. Keep this Manual for later reference. The appliance shall be installed by a qualified person according to valid rules and Manufacturer's Instructions, otherwise the warranty is null and void.


This appliance is designed to accumulate heating water and distribute it subsequently. It shall be connected to a heating system and heat sources.

Using the thermal store for other purposes than above described is forbidden and the manufacturer accepts no responsibility for damage caused by improper or wrong use. The thermal store shall not be used as a DHW tank!

3 - Technical Data and Dimensions

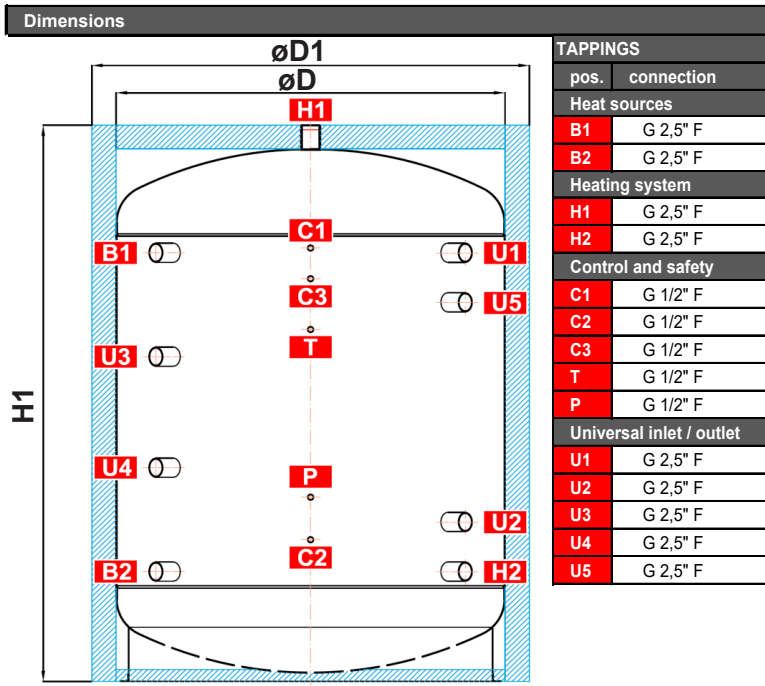

TAPPINGS	
pos.	connection
Heat sources	
B1	G 2,5" F
B2	G 2,5" F
Heating system	
H1	G 2,5" F
H2	G 2,5" F
Control and safety	
C1	G 1/2" F
C2	G 1/2" F
C3	G 1/2" F
T	G 1/2" F
P	G 1/2" F
Universal inlet / outlet	
U1	G 2,5" F
U2	G 2,5" F
U3	G 2,5" F
U4	G 2,5" F
U5	G 2,5" F

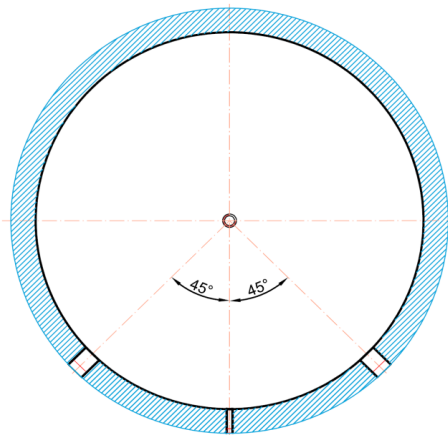

Tank code: a
 Insulation code: b
 Total fluid volume in tank: c
 Max. working pressure in tank PS3000 N25 + PS5000 N25: **3 bar**
 Max. working temperature in tank: **95 °C**
 Empty weight: d
 Tipping height without insulation: **V1**

Type - model		PS3000 N25	PS4000 N25	PS5000 N25
Tank code	a	14454	14457	14331
Insulation code	b	16354	16355	16356
Fluid volume in tank [l]	c	3022	3991	4989
Empty weight [kg]	d	309	423	485
Tipping height [mm]	V1	2180	2490	2970
Dimensions [mm]	ø D1	1700	1800	1800
	ø D	1500	1600	1600
	B1	1545	1815	2315
	B2	445	465	465
	H1	2065	2355	2855
	H2	445	465	465
	C1	1565	1835	2335
	C2	545	600	670
	C3	1445	1705	2105
	T	1265	1490	1855
	P	715	780	925
	U1	1545	1815	2315
U2	645	675	775	
U3	1185	1375	1705	
U4	805	905	1075	
U5	1345	1605	2005	

4 - Operation

In the thermal store, heating water is heated up from several heat sources like various types of hot-water boilers, renewable energy sources (heat pumps, solar collectors), or electric heating elements. The thermal store shall be connected to a heat source through G 2,5" threaded fittings. Should the tank be connected to a solar system, this must be done via a heat exchanger because solar systems are not filled with heating water. Individual connection points are assigned according to the circuits to be connected. There is a wide choice of combinations, just some examples are described in the following chapter.


5 - Examples of ports allocation

Conn. point	Example I. -solid boil. + el.	Example II. - firepl. + gas boil.	Example III. - heat p. + el.
H1	outlet to a heating system	outlet to a heating system	outlet to a heating system
B1	inlet from a solid fuel boiler	outlet to a gas boiler	el. heating element
U3	el. heating element	plug	inlet from a heat pump
U4	plug	plug	plug
B2	inlet to a solid fuel boiler	inlet to a fireplace	return line to a heat pump
H2	drain valve, expansion vessel	drain valve, expansion vessel	drain valve, expansion vessel
U27	return line from a heating system	return line from a heating system	return line from a heating system
U5	plug	plug	plug
U1	el. heating element	plug	el. heating element
C2	safety valve, G 1/2", 3 bar	safety valve, G 1/2", 3 bar	safety valve, G 1/2", 3 bar
P, T, C3, C1	sheaths for weather compensated controller, thermometer, thermostat...		

Connections depend on the circuit to be connected, the a.m. examples are informative only.


Example I.

Solid fuel boiler and el. heating element.

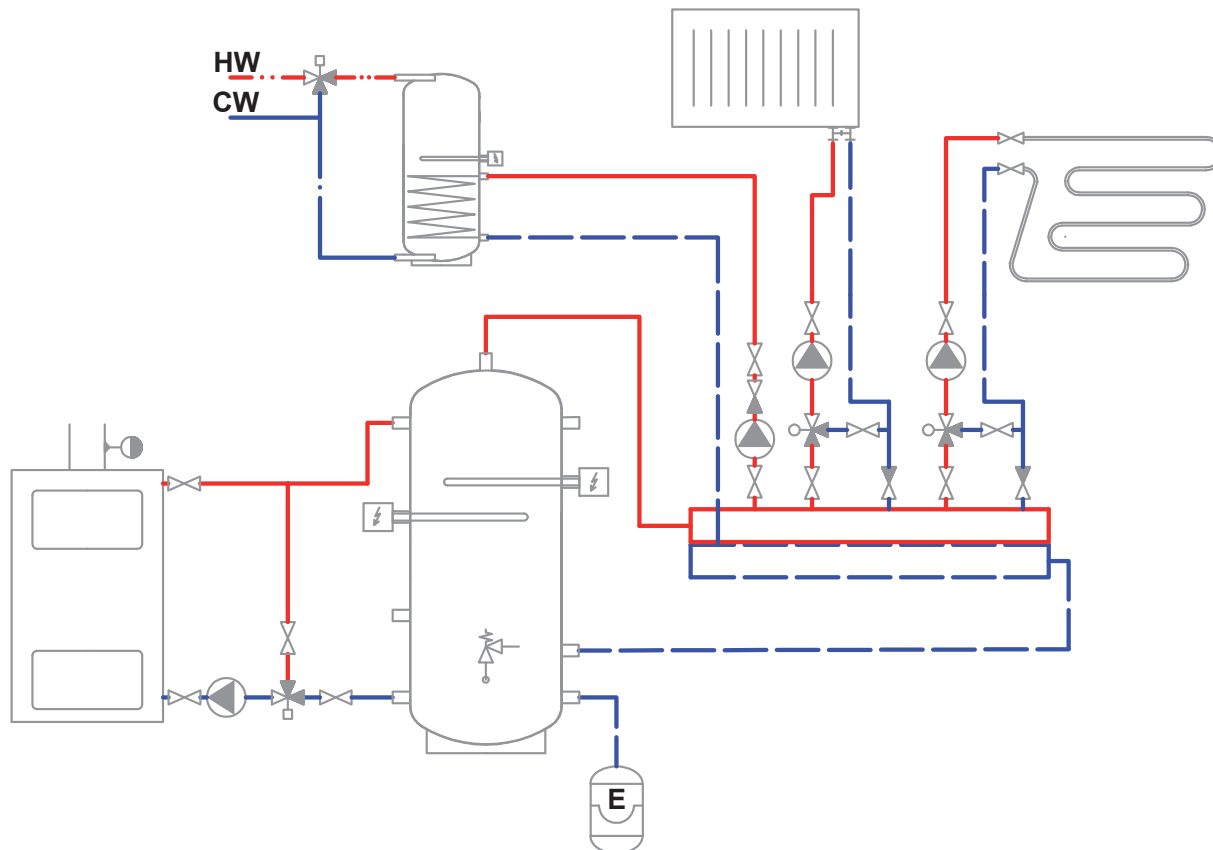


Example II.

Gas fired boiler and hydronic fireplace.

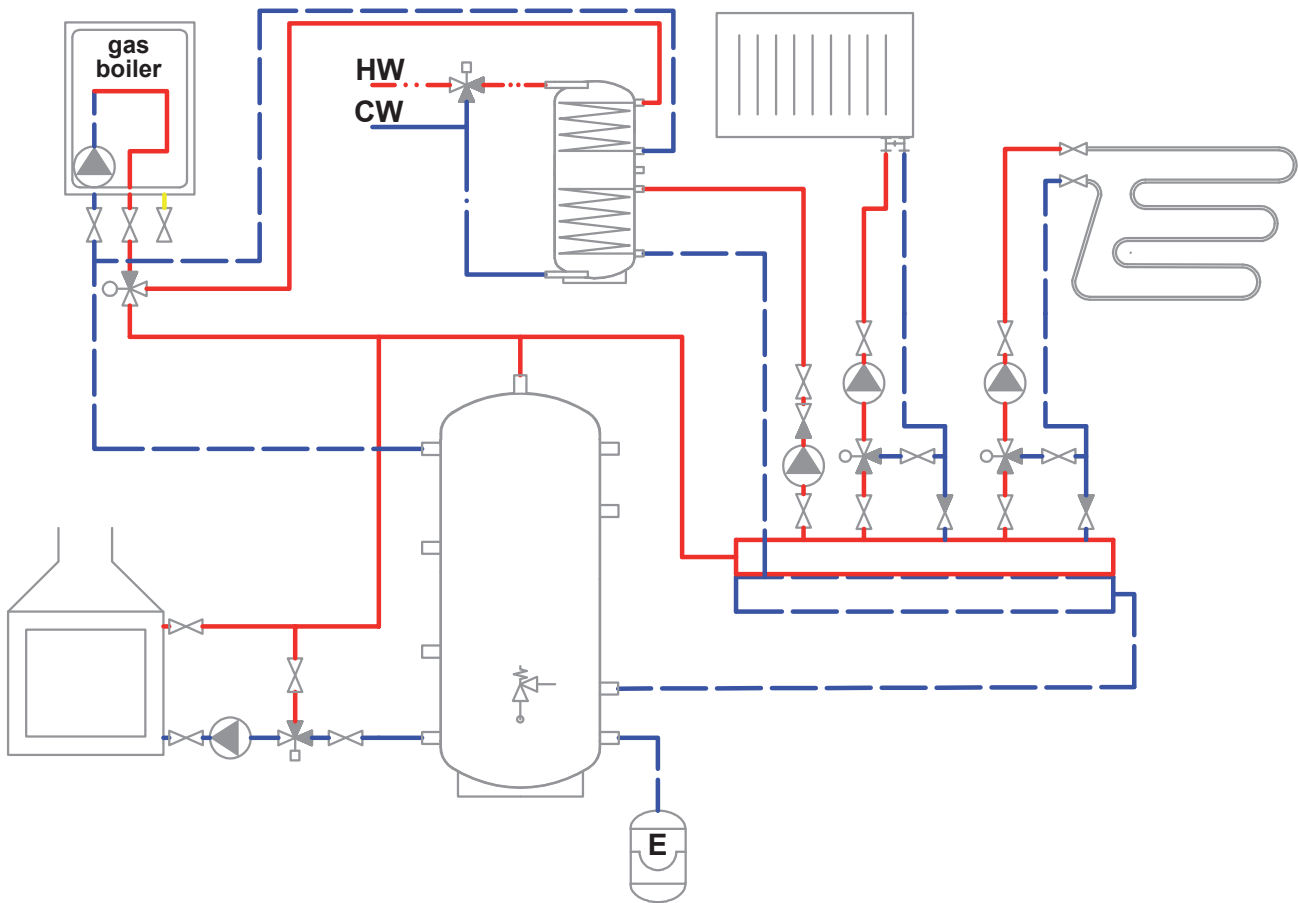

Example III.

Heat pump and electric heating element.

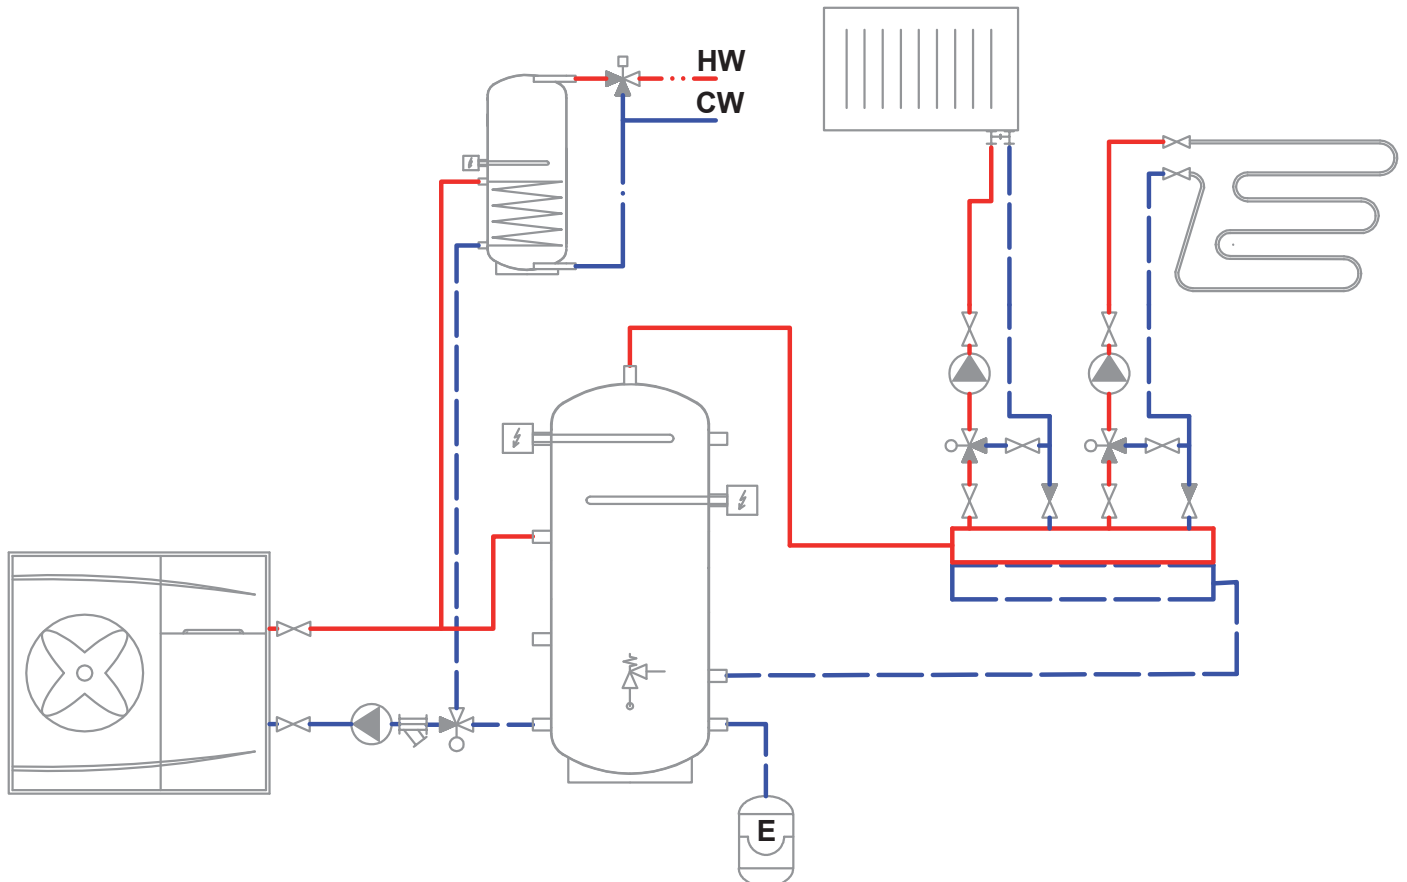

6 - Installation and Commissioning

Installation shall meet valid rules and may be done by qualified staff only.

Defects caused by improper installation, use or handling are not covered by warranty.

After the tank is installed and connected to an existing heating system, it is recommended to clean the entire heating system using a suitable cleaning agent, e.g. MR-501/R.

Anti-corrosion protective liquid should be also used, e.g. MR-501/F or F1.

6.1 - Connection to heat sources

Place the tank on the floor, as close to your heat source as possible. Mount the insulation, cf. Installing Insulation on the Tank. Connect the heating circuits to inlets and outlets respecting the thermal stratification in the tank. Install a drain valve at the lowest point of the tank. Install an air vent valve at the highest point of the system. Insulate all the connecting piping.

6.2 - Connection to a solar system

The tank can is not primarily intended for use with a solar system but if needed, this can be done via a heat exchanger between the solar system and the tank. In such a case, insulate well all the piping between the tank and the solar system.

6.3 - El. heating element installation

The tank may be fitted with electric heating elements up to 12kW output. They can be power-supplied either directly (elements with built-in thermostat) or via a controller for the entire heating system.

All electric heating elements shall be protected by a safety thermostat.

Electric heating elements shall be installed by an authorized person only.

6.4 - Commissioning

This tank is not designed for DHW heating.

The tank shall be filled up together with the heating system, respecting valid standards and rules. In order to minimize corrosion, special additives for heating systems should be used. The quality of heating water depends on the quality of filling water at commissioning, on the top-up water and on the frequency of topping up. This has a strong influence on the lifetime of heating systems. Poor quality of heating water may cause problems like corrosion or incrustation, esp. on heat transfer surfaces.

Fill the heating circuits with the appropriate fluids and air-bleed the entire system. Check all connections for leaks and verify the system pressure. Set the heating controller in compliance with the documentation and manufacturer's recommendations. Check regularly proper function of all control and adjustment elements.

7 - Installing Insulation on the Tank

Instructions

Product description

Fleece thermal insulation with PU leather surface.

Warning

Insulation installation shall be done in two or three persons, depending on its size. The insulation **must not be installed at temperatures below 20 °C**. If this cannot be avoided, the insulation shall be pre-warmed in another room to at least 20 °C. It is impossible to install insulation of lower temperature, there is a risk of damage, esp. to the zipper. Do not use any tools for installation.

Keep away from open fire.

Installing Insulation

1. Fix the tank following installation instructions.
2. Wrap the insulation around the tank carefully. Check that the insulation adheres to its body perfectly. This can be reached by rubbing and patting the insulation by hand from its center evenly in both directions until the insulation adheres to the tank's surface completely and no bubbles are left.
3. Use the holes for sleeves as a rest during the insulation installation.
4. At least one person presses the insulation to the tank, pulling both ends together. The other person closes the zipper.
5. Put on the upper insulation and cover.
6. Push on the covering plastic rosettes depending on the size of sleeves, or put on the flange plug(s) with insulation.
7. Finish the tank installation in compliance with the respective instructions and valid standards and rules.

Warranty on insulation


The insulation is covered by a 24-month warranty. This period starts the next day after the insulation is sold.

- Warranty shall become null and void if:
 - the procedure described in the Installation Manual was not respected,
 - the product was used for other purposes than intended.
- Warranty does not cover:
 - usual wear and tear,
 - damage caused by fire, water, electricity or a natural disaster,
 - defects caused by failure to use the product in compliance with its intended purpose, by improper use and insufficient maintenance,
 - defects caused by mechanical damage to the product,
 - defects caused by tampering or incompetent repair.

Installation instructions for soft insulation with PU leather surface



+ 20.0° C
+ 68.0° F

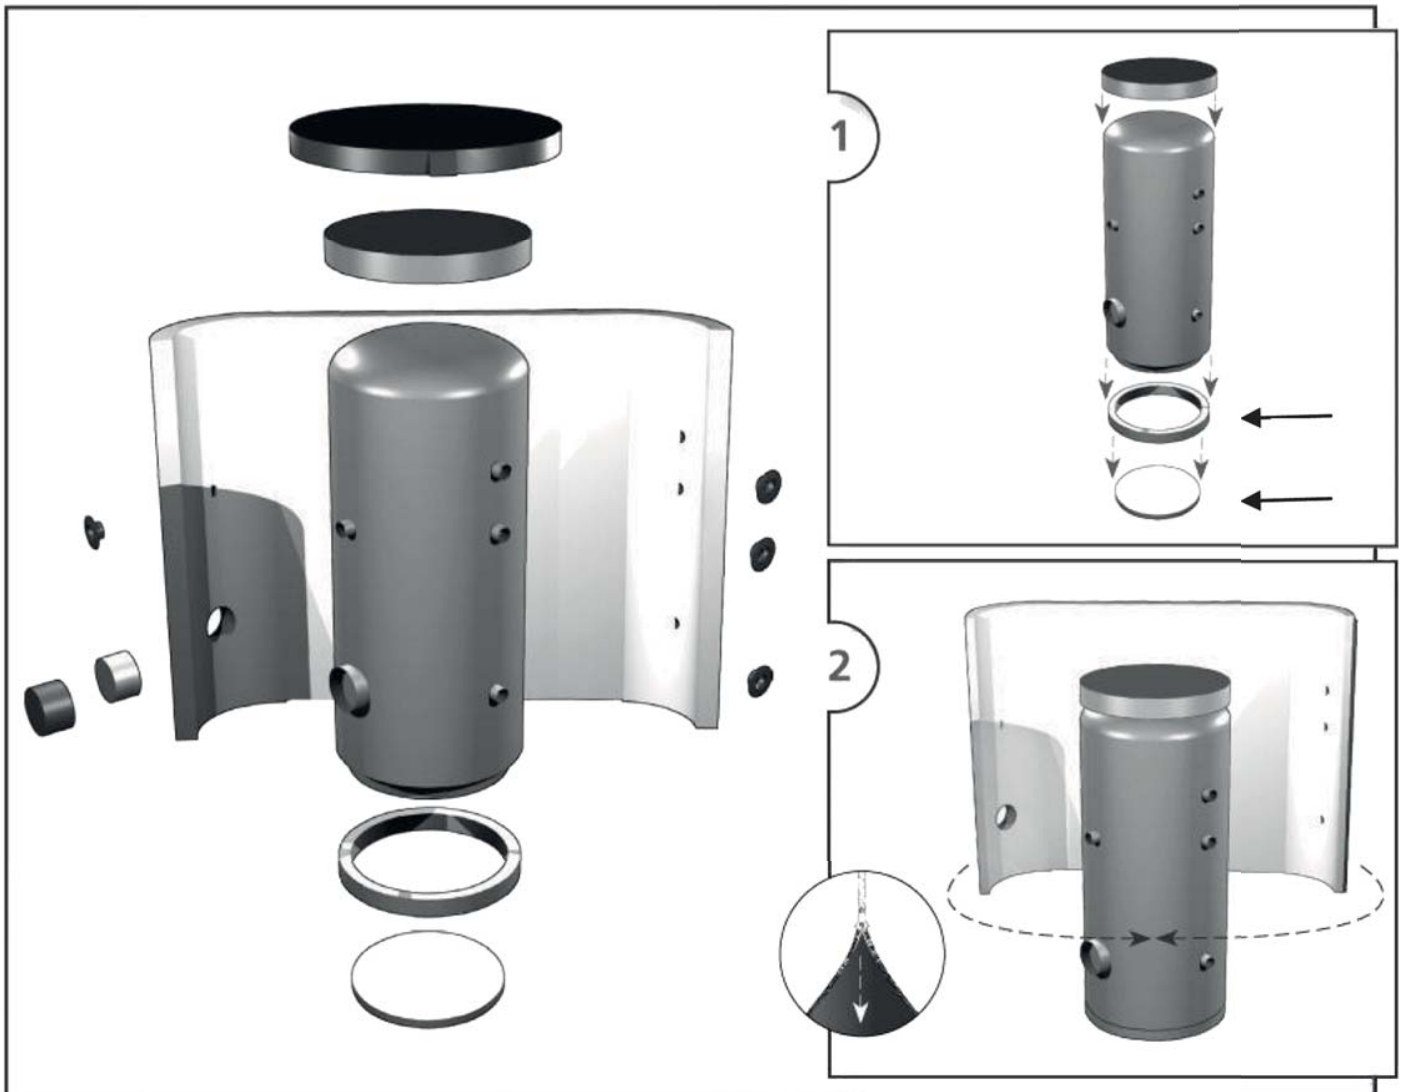

8 - Maintenance

If the tank is fitted with a heating element, disconnect it from the mains first. Clean the exterior of the tank with a soft cloth and a mild detergent. Never use abrasive cleaners or solvents. Check all connections for leaks.

9 - Disposal

Packing shall be disposed of in compliance with the valid rules. When the product reaches the end of its life, it shall not be disposed of as household waste. It shall be dropped off at a Local Waste Recycling Center. Insulation shall be recycled as plastic and the steel vessel as scrap iron.

10 - Warranty

This product is covered by warranty under the conditions listed in this Manual and in compliance with the Warranty Certificate. A Warranty Certificate is an integral part of this thermal store scope of supply.

